



CONTACT US:
H.O. BOSTROM CO., INC.
818 PROGRESS AVE., WAUKESHA, WI 53186
SALES@HOBOSTROM.COM
T 262.542.0222 | 800.332.5415 | F 262.542.9247

INSTALLATION INSTRUCTIONS FOR ZIP CLEAN RETROFIT SIERRA NON-ABTS WITH LUMBAR

GENERAL PRODUCT INFORMATION

Studies show that a wet-soap decon can reduce cancer causing contamination on gear by up to 85%.* Zip Clean seats are designed with covers that can be zipped off, machine washed and hung to dry. Covers are made with Durawear Plus™ material which has a waterproof backing, dries quickly and is puncture and tear resistant. In addition, Zip Clean seats utilize a FoamBlock™ encapsulated barrier which reduces the absorption of gases into the seat. Encapsulated foam can be gently wiped clean if needed, further supporting the cleanability of the product.

DOCUMENT PURPOSE

The purpose of this document is to illustrate how to attach encapsulated back foam and a Zip Clean back cover on a seat frame with a lumbar adjuster. It is important that the installer read and understand all safety information and instructions before starting the installation procedure.

SAFETY INFORMATION

⚠ DANGER indicates a hazardous situation which, if not avoided, **WILL** result in death or serious injury.

⚠ WARNING indicates a hazardous situation which, if not avoided, **COULD** result in a death or serious injury.

⚠ CAUTION indicates a hazardous situation which, if not avoided, **COULD** result in minor or moderate injury.

NOTICE is used to address practices not related to physical injury.

SAFETY INSTRUCTIONS (or equivalent) signs indicate specific safety related instructions or procedures.

PARTS LIST

8086-02201F: KIT BACK C/P SIERRA HB ZIP CLN

Item No.	Description	Qty
①	FOAM MOLDED HB SIERRA	1
②	CVR HBRX ZIP CLN	1

TOOLS REQUIRED

Hot glue applicator

DEFINITION OF TERMS

1. Hook and Loop.



Figure 1

INSTALLATION INSTRUCTIONS

⚠ CAUTION: The installer is responsible for applying hot glue on foam. Failure to use caution when apply hot glue will cause burns.

NOTICE: Adjust the lumbar mechanism to the lowest setting before performing installation procedure.

- A. Remove existing back cover and back foam. Clean frame by removing any bits of stray foam from the removed back cushion.
- B. Apply hot glue in areas shown. See Figure 1.

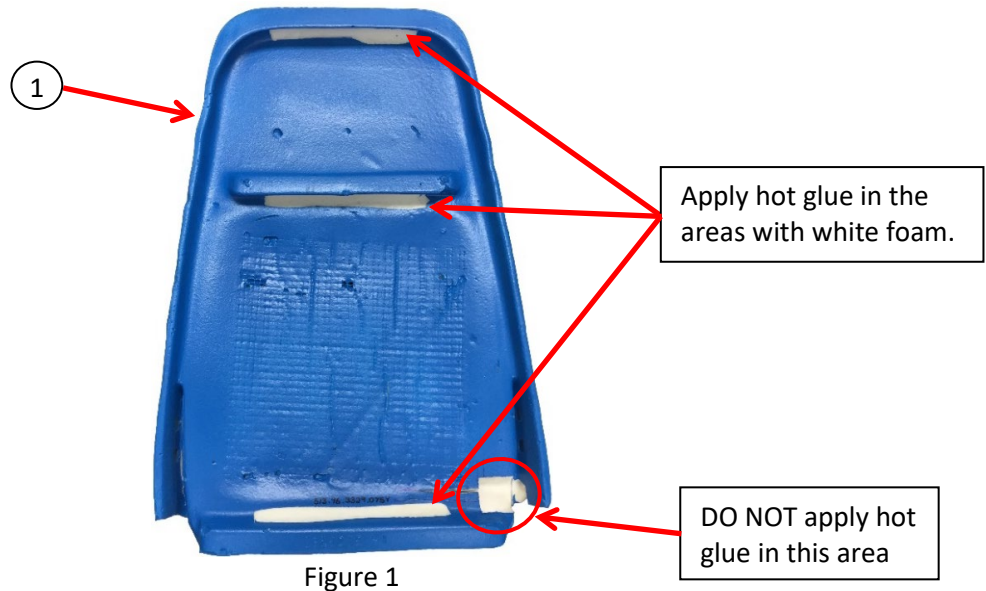


Figure 1

NOTICE: It is important to attach the foam to the frame immediately after applying the glue to the foam. The glue cools and hardens quickly, especially when it touches the frame.

- C. While the glue from step 1 is still hot, attach foam to seat frame. See Figure 2.

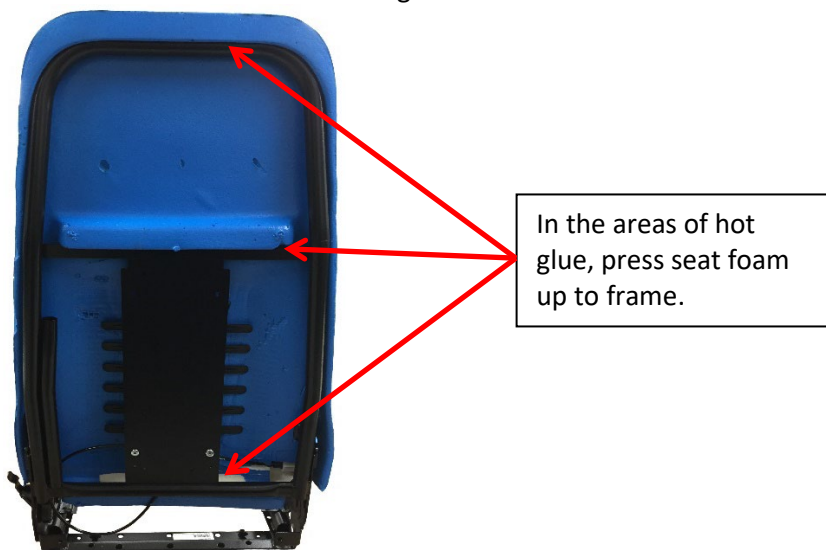


Figure 2

D. Wrap cutout in foam around lumbar knob. See Figure 3.



Figure 3

E. Pull cover down around foam and frame. See Figure 4.



Figure 4

F. Seam on rear of cover is to lay on top rear edge of foam. See Figure 5. Pull cover down so no blue foam is visible on the sides of the cover.



Figure 5

- G. Fasten hook and loop under lumbar knob. See Figure 6.

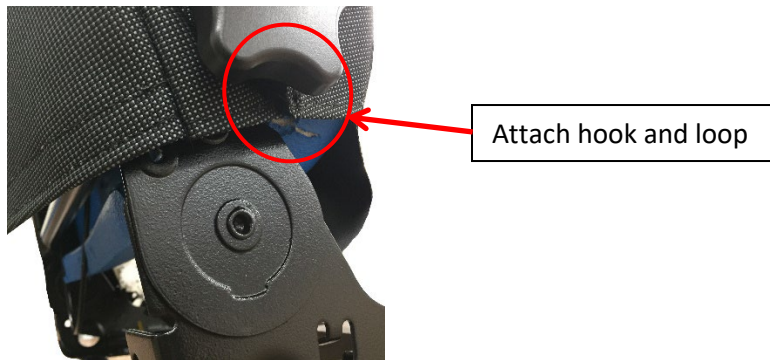


Figure 6

- H. Close zipper at rear of cover. See Figure 7.



Figure 7

- I. Pull the hook and loop at bottom of cover towards the back of the seat. See Figure 8.



Figure 8

J. Pull hook and loop up and fasten to the inside cover. See Figure 9.

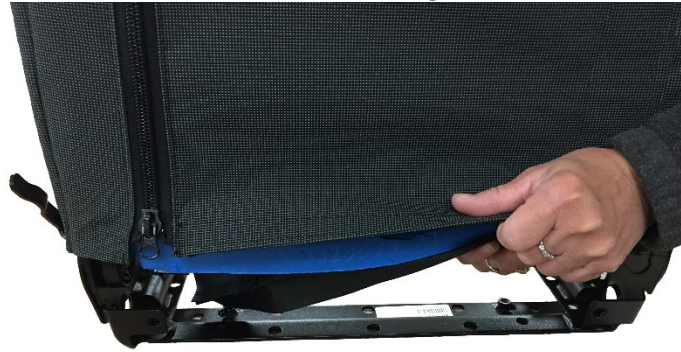


Figure 9

K. Ensure cover is centered side to side on back foam. See Figure 10.



Figure 10